

Money exchange rate screen



1200 mm

610 mm

Linker

DATE 88-88 TIME 99:99

how are you

EXCHANGE RATE

	WE BUY	WE SELL
US DOLLAR USD	888888	888888
CANADA DOLLAR CAD	888888	888888
UK POUND GBP	888888	888888
EURO EUR	888888	888888
SWISS FRANK CHF	888888	888888
SOUTH AFRICAN RAND ZAR	888888	888888
OMANI RYAL OMR	888888	888888
UAE DIRHAM AED	888888	888888
JAPANESE YEN JPY	888888	888888
SOUTH AFRICAN RAND ZAR	888888	888888
DANISH KRONE DKK	888888	888888
NORWEGIAN KRONE NOK	888888	888888
KENYAN SHILING KES	888888	888888
UGANDAN SHILING UGS	888888	888888
ZIMBABWE DOLLAR ZWD	888888	888888
ZIMBABWE DOLLAR ZMK	888888	888888
INDIAN RUPEE INR	888888	888888

1:1

Linker

DATE 88-88 TIME 99:99

how are you

EXCHANGE RATE

	WE BUY	WE SELL
US DOLLAR USD	888888	888888
EURO EUR	888888	888888
BRITISH POUND GBP	888888	888888
JAPANESE YEN JPY	888888	888888
SOUTH AFRICAN RAND ZAR	888888	888888
CANADIAN DOLLAR CAD	888888	888888

INTEREST RATES% ABOVE 5m 35 mm BELOW 5m

CURRENT ACCOUNT	888888	888888
SAVING ACCOUNT	888888	888888
STRICT CALL	888888	888888
30 DAYS	888888	888888
90 DAYS	888888	888888
PRIME LENDING	888888	888888

IR receiver

RS-232


USB

AC 220V IN




Money exchange rate screen Operation manual


1. Within a certain range (3 Meters) of the remote control flashes front of the second point of the display board position (if the remote control does not work, check the battery is valid or stand far)
2. Figures modification method of exchange rates sign:


1) The position of the remote control  at the screen time flashing press the green button, that the first one digital flash , then you can adjust the digital information.


2) Enter numbers "0-9" decimal point "EQ" modify the figures until the right to delete a number, press "BAND".

A: Press the arrow keys to enter the next which data values or data values .

B: Adjustment is completed,  press the red button to determine the led display and can save and exit automatically and display normally.

3. Press the green button,  the remote control at the screen time flashing position appears to exchange one digit is flashing, press "CLK", the exchange rate stops flashing, press the right arrow

 to move , modify year , month, date , day of the week ,when , sub . Adjustment is completed,

 Press the red button to determine the led display and can save and exit automatically and display normally.





Specifications:

- A. Backup memory, keep the latest exchange rates when the power off.
- B. Date and time display, with built-in RTC (real time clock).
- C. Six digits, 1 Inch high definition per field.
- D. Each column included flag and country name in additional to BUY and SELL fields.
- E. Flags of countries fixing by magnetic strip.
- F. Rates, Date/Time and bright message can be managed by PC via RS232, TCP/IP.
- G. Rates, Date/Time and bright message can be changed by remote control.
- H. Ability to update the rates automatic by internet, Ability to update the rates automatic by internet.
- I. Ability to show Precious Metals prices, "Optional".
- J. Currencies rows expandable to 24 rows.
- K. Power: 90-250VAC power supply built in.