 
 





TGT-R with recording software.

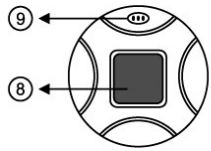

**TGT-R Slave Unit**  
Slave Unit Speaker.  
Slave unit microphone.

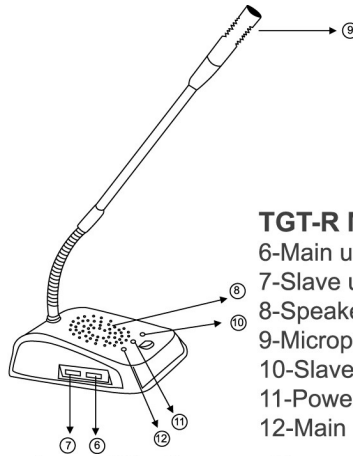

 **TGT-R Main Unit.**  
6-Main unit volume knob.  
7-Slave unit volume knob.  
8-Speaker.  
9-Microphone.  
10-Slave unit audio indicator.  
11-Power indicator light.  
12-Main unit audio indicator light.

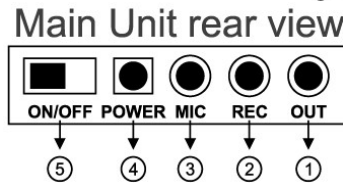

**Main unit**  
1-Slave unit Jack.      4- Power Jack.  
2- Recorder Jack.      5- Power switch.  
3- External Microphone Jack.

**Installation:**

- Install the main unit inside employee disk.
- Fix the slave unit at a convenient height.
- Pull power switch to ON position, Power indicator LED (12) will be light on.
- Connect recorder Jack (2) to the computer or any kind of audio recorder (signal level is 1.1Vp~p).

**Troubleshooting:**

Main unit and slave unit no voice.	Power unplugged or not plugging properly, please remove it, then re-insert and adjust it properly.
Squeal problem "feedback".	Adjust volumes (6,7) at minimum the increase one by one slowly to get better level without feedback (take you consider that the volumes knob no. 6 for controlling employee sound level and volume knob no. 7 for costumer sound level. If the weak sound-proof on installed window please enlarges the distance between main unit and slave low down the volume accordingly.
Main unit sound's level is too low.	If there is a problem that main unit speaks too far increase the voice of main unit clock wisely.
Slave Unit sound's level is too low.	If there is a problem that client "slave unit" speaks too far Increase the voice of slave unit clockwise.
Intermittent sound cannot be normal communication.	The Mic. "slave unit" is too far from the speaker, put it close; or when one is speaking , the other rushing, the voice would be inhibited, or the environment too noisy, you can decrease the volume of the noise, or inform the one closer to speak on microphone.